



COOLIBAH CONTEMPORARY - WALL BASIN OUTLET

WATER EFFICIENT TAPWARE

CAROMA

PLUMBERS INSTALLATION INSTRUCTIONS

Important Information

- * **Not suitable for gravity feed systems.**
- * **Wall basin outlet is fitted with a flow regulated aerator insert. This low flow rate may not be suitable for connection to some Instantaneous Gas Water Heaters, some Tempering Valves, some Solar Water Heaters & some Thermostatic Mixing Valves. Check with the manufacturers of these products.**
- * **All pipework must be thoroughly flushed prior to installation, as foreign materials may block the flow regulating device and reduce the flow of water. Note: Aerator insert housing must be retightened to prevent removal by hand.**

Installation

- 1) Check that threaded nipple (1) is the correct length, as shown. Apply thread tape to the thread.
Important : Care must be taken that thread tape cannot become dislodged and block the flow regulating device, causing a reduction in water flow.

- 2) Screw the wall basin outlet (2) onto the threaded nipple (1) and position as required. DO NOT OVERTIGHTEN.

Removing Aerator Insert

- 1) Carefully remove aerator housing (3) from basin outlet (2), taking care not to damage the decorative finish.
- 2) Remove 'O' Ring (5) & aerator insert (4) from aerator housing (3). Check that aerator housing (3) is clean. Deposits of lime can be removed by washing in a vinegar solution.
- 3) Fit aerator insert (4) into aerator housing (3) followed by 'O' Ring (5) then screw assembly into basin outlet (2) and tighten securely (to prevent removal by hand).

IMPORTANT

Pressure & Temperature Requirements.

- Hot and cold water inlet pressures should be equal.
- Static inlet pressure range : 150 -1000 kPa
New Regulation :-500 kPa maximum operating pressure at any outlet within a building.(Ref. AS/NZS 3500.1)
- Maximum hot water temperature : 80°C.

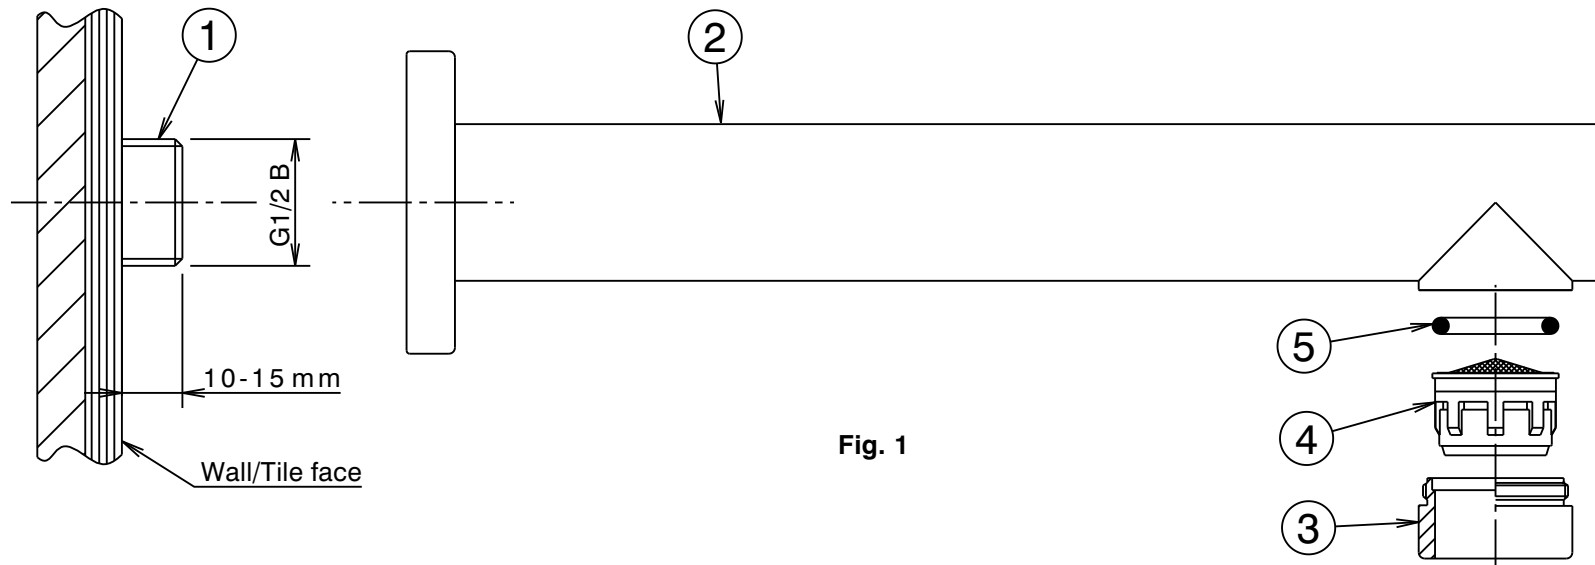


Fig. 1