

## PLUMBERS INSTALLATION INSTRUCTIONS

### Important Information

- \* Not suitable for gravity feed systems.
- \* Body (1) is fitted with a flow regulated aerator insert. This low flow rate may not be suitable for connection to some Instantaneous Gas Water Heaters, some Tempering Valves, some Solar Water Heaters & some Thermostatic Mixing Valves. Check with the manufacturers of these products. The flow regulator can be accessed as shown (Fig.1).
- \* All pipework must be thoroughly flushed prior to installation, as foreign materials may block the flow regulating device and reduce the flow of water.

### Installation

- 1) Wall lining hole should be cut or finished as shown (Fig.2).
- 2) Apply thread seal tape to the threaded tail as shown (Fig.2).  
**Important:** Care must be taken that thread seal tape cannot become dislodged and block the way causing a reduction in water flow.

- 3) Apply silicone sealant or equivalent to the tap body flange and screw the tap body onto the nipple (Fig.2).
- 4) Ensure that the tap is oriented with the spout pointing downwards (Fig.3).

### Inlet Connection:

1/2" BSP

<b>IMPORTANT</b>
<b><u>Pressure &amp; Temperature Requirements.</u></b>
<ul style="list-style-type: none"> <li>• Static inlet pressure range : 150 -1000 kPa New Regulation :-500 kPa maximum static pressure at any outlet within a building. (Ref. AS/NZS 3500.1)</li> <li>• Water temperature range: 5 - 80°C.</li> </ul>

