



# VILLA ACCESSORIES

## INSTALLATION INSTRUCTIONS

### Important Information:

- \* Wall anchor (1) is only suitable for use in cavity walls with a tiled surface. If installing into a plasterboard cavity wall (untiled) it is recommended that the accessory be attached to the wall in line with a stud or noggin using suitable screws.
- \* For cavity wall applications, the total wall thickness must be 12-18mm when using the supplied wall anchor.
- \* Ensure two fixing plates centre to centre are horizontal before drilling for towel rail and glass shelf.
- \* To prevent drill from wandering on tiled surface it is recommended that masking tape be applied before drilling.
- \* Distance between centres of fixing plates with holes:
  - For Towel Rails :  $799 \pm 1$  mm.
  - For Glass Shelf : 300 - 400mm recommended.
- \* Do not use accessories for personal support.
- \* Over time, the mounting screws which are used to install the product may be affected by exposure to water, which may cause the screws to rust and loosen. You should periodically check that your accessory is fastened securely to the wall.

### Installation

#### A) DETERMINE WALL TYPE:



**SOLID WALLS:** -(Brick, masonry blocks, concrete etc)

- Drill two holes 8mm diameter, 50mm deep for each fixing plate. (hole centres at 45 degrees from horizontal, centre-to-centre distance 11mm)
- Cut the wings of the wall anchor (1) at the elbow joint using scissors or a sharp knife as shown in Fig. 2.
- Squeeze the cut wings of the wall anchors (1) together and insert into the 8mm drilled holes, ensuring anchor heads are flush against the wall.
- Place the fixing plate (2) against the wall, then pass the screws (3) through holes of the fixing plate (2) and assemble into the wall anchors (1).  
For Towel Rails and Glass Shelf: Check alignment of both fixing plates (2) before tightening screws (3).

**TILED CAVITY WALLS:** -(Gyprock/tile, fibre cement sheet/tile)

**Note:** Total wall thickness must be between 12-18mm.

- Drill two holes 8mm diameter for each fixing plate.
- Squeeze the wings of the wall anchors (1) together and insert into the 8mm drilled holes, ensuring anchor heads are flush against the wall.
- Place the fixing plate (2) against the wall, then pass the screws (3) through holes of the fixing plate (2) and assemble into the wall anchors (1).  
For Towel Rails and Glass Shelf: Check alignment of both fixing plates (2) before tightening screws (3).

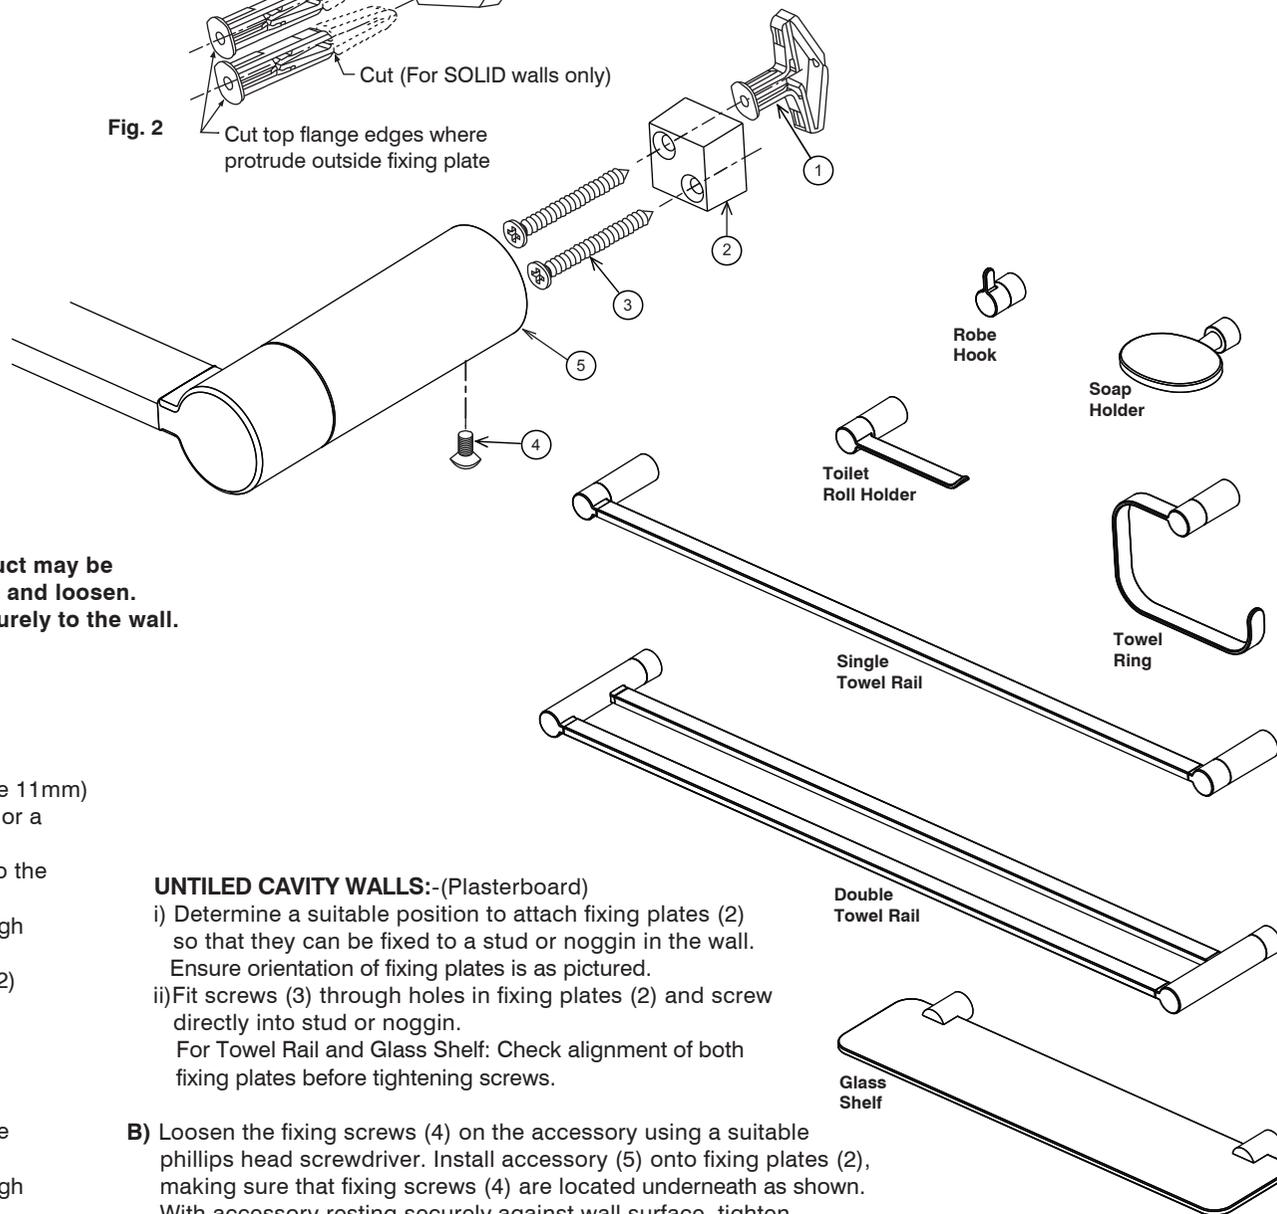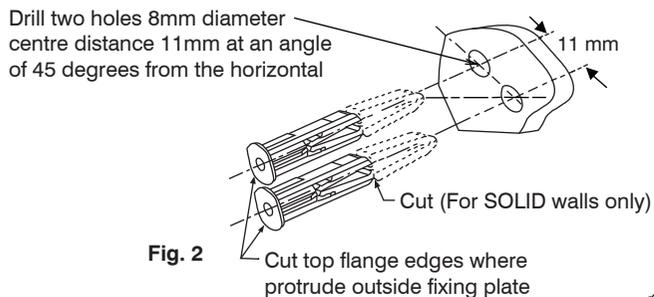

**UNTILED CAVITY WALLS:**-(Plasterboard)

- Determine a suitable position to attach fixing plates (2) so that they can be fixed to a stud or noggin in the wall. Ensure orientation of fixing plates is as pictured.
- Fit screws (3) through holes in fixing plates (2) and screw directly into stud or noggin.  
For Towel Rail and Glass Shelf: Check alignment of both fixing plates before tightening screws.

- B)** Loosen the fixing screws (4) on the accessory using a suitable phillips head screwdriver. Install accessory (5) onto fixing plates (2), making sure that fixing screws (4) are located underneath as shown. With accessory resting securely against wall surface, tighten the fixing screws (4) using suitable phillips head screwdriver.