



# KIP - BATH OUTLET

+

## PLUMBERS INSTALLATION INSTRUCTIONS

### Important Information

\* All pipework must be thoroughly flushed prior to installation.

### Installation

- 1) Check that threaded nipple (1) is the correct length, as shown. Apply thread tape to the thread.
- 2) Apply a light smear of suitable grease to the 'O' Ring seal (2) to assist in retaining the seal in its groove in the outlet base (3). Screw the inlet of the bath outlet (3) together with the 'O' Ring seal (2) onto the threaded nipple (1) and position as required. DO NOT OVERTIGHTEN.

IMPORTANT
<b><u>Pressure &amp; Temperature Requirements.</u></b>
<ul style="list-style-type: none"><li>• Hot and cold water inlet pressures should be equal.</li><li>• Static Inlet pressure range : 150 -1000 kPa New Regulation : -500 kPa maximum static pressure at any outlet within a building. (Ref. AS/NZS 3500.1-2003, Clause 3.3.4)</li><li>• Maximum hot water temperature : 80°C.</li></ul>

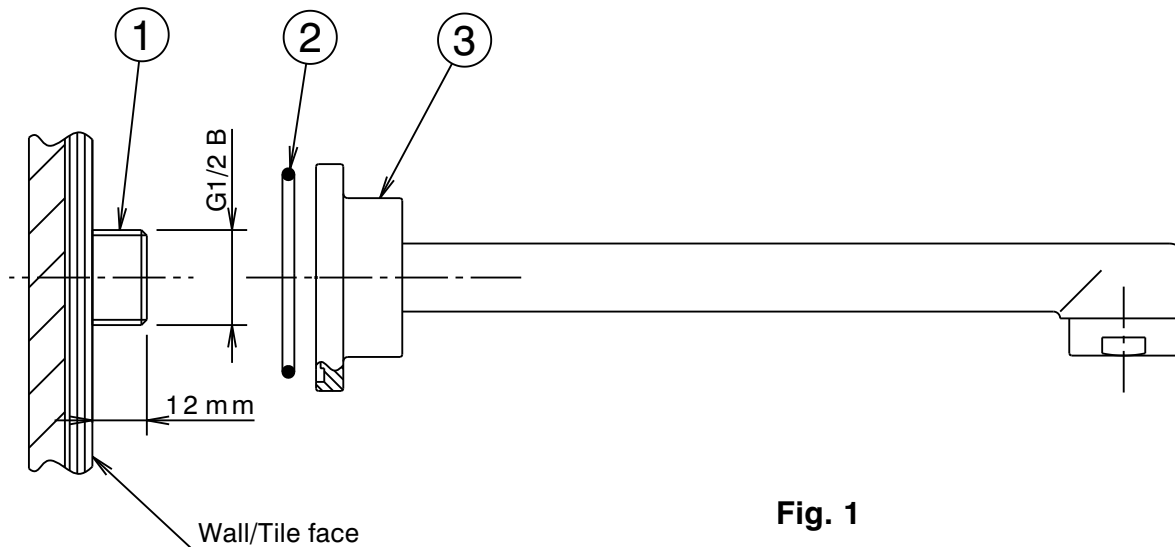


Fig. 1

+