



COOLIBAH CLASSIC CROSS - BATH OUTLET

+

CAROMA

PLUMBERS INSTALLATION INSTRUCTIONS

Important Information

* All pipework must be thoroughly flushed prior to installation.


Installation

- 1) Check that threaded nipple (1) is the correct length, as shown. Apply thread tape to the thread.
- 2) Screw the bath outlet (2) onto the threaded nipple (1) and position as required. DO NOT OVERTIGHTEN.

Removing Aerator Insert

- 1) Carefully remove aerator housing (3) from bath outlet (2), taking care not to damage the decorative finish.
- 2) Remove seal (5) & aerator insert (4) from aerator housing. Check that aerator housing is clean. Deposits of lime can be removed by washing in a vinegar solution.
- 3) Fit aerator insert (4) into aerator housing (3) followed by seal (5) then screw assembly onto bath outlet (2) and tighten securely.

IMPORTANT
<u>Pressure & Temperature Requirements.</u>
<ul style="list-style-type: none"> • Hot and cold water inlet pressures should be equal. • Static inlet pressure range : 150 -1000 kPa New Regulation :-500 kPa maximum operating pressure at any outlet within a building. (Ref. AS/NZS 3500.1) • Maximum hot water temperature : 80°C.

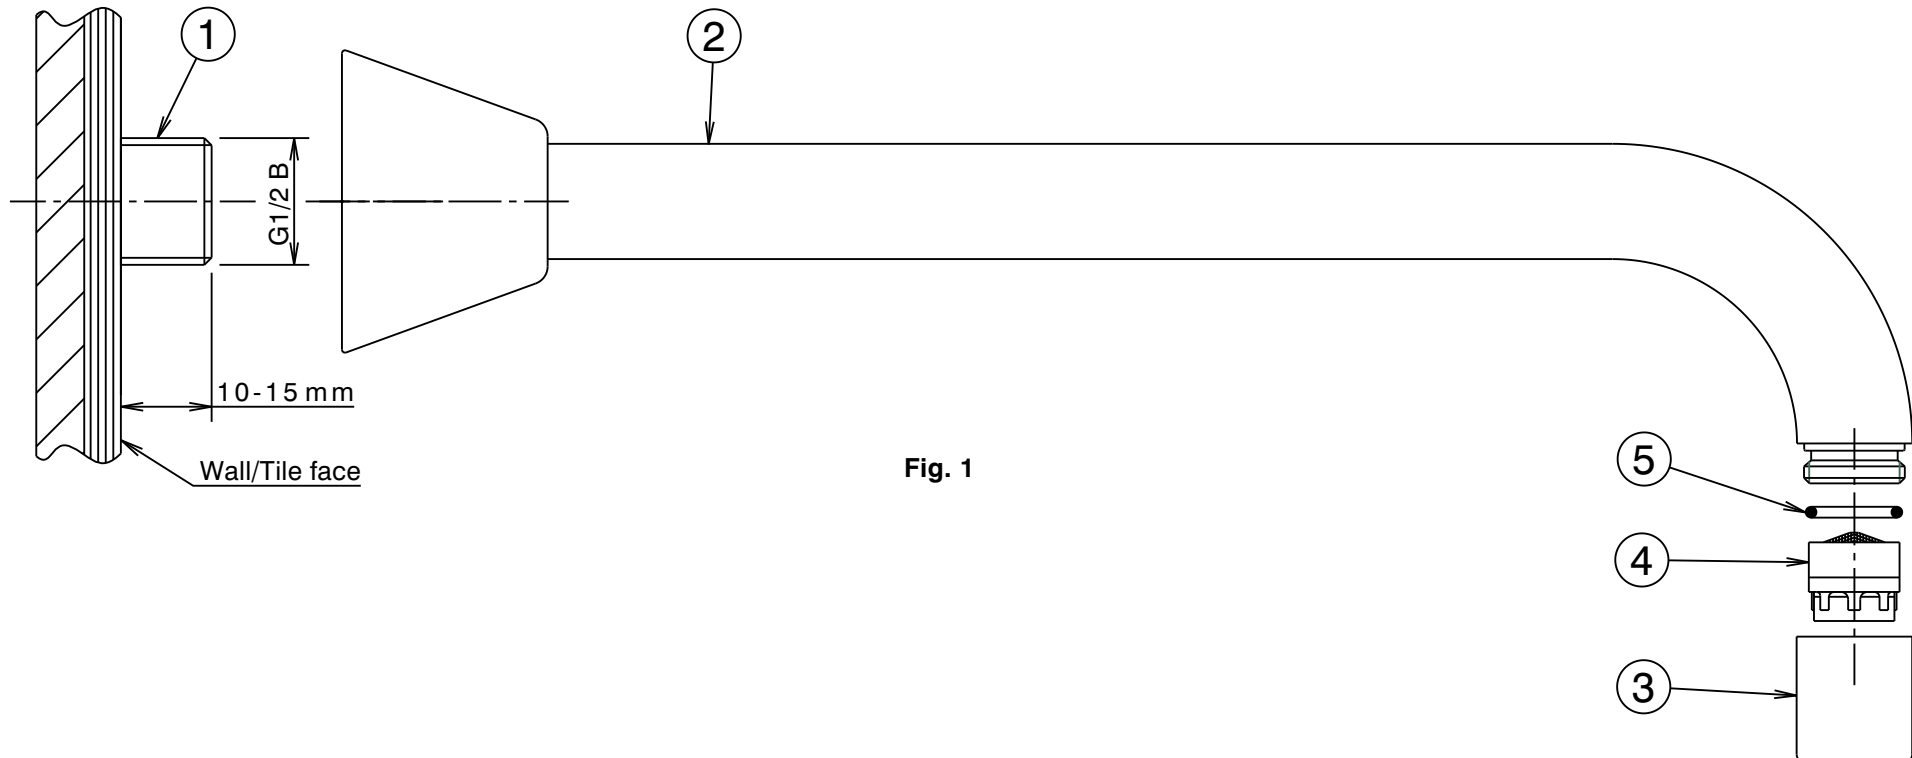

+