

# Basa

Vitreous China  
Inset Basin

200mm 100mm 0  
Scale

Back


Ø20mm Hole

Cut-out template

100mm

200mm

**IMPORTANT**  
Use only acetic cured  
silicone sealant / caulking.  
**Epoxy type  
glues must  
not be used.**

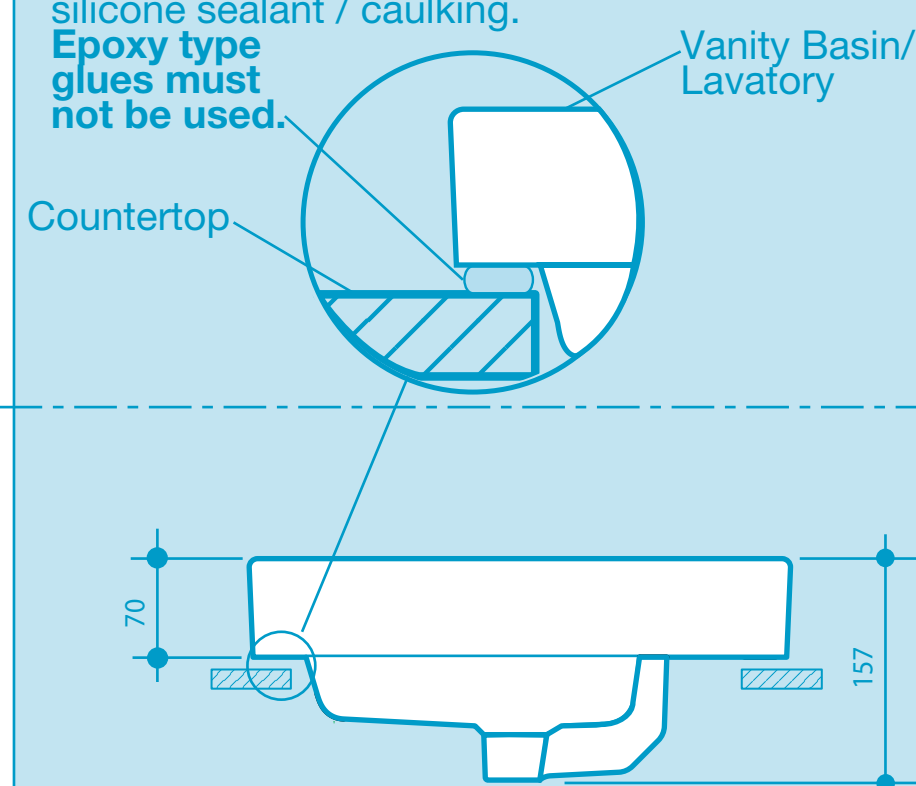

Installation in accordance with AS/NZS 3500.2

## Installation Instructions

1. Position template over countertop.
2. Attach template cut-out guide to countertop with adhesive tape or otherwise transfer cut-out line to countertop.
3. Drill Ø20mm (3/4") holes and use as jigsaw starter.
4. Fit taps/faucets and waste/drain assembly to basin.
5. Clean underside of the sealing rim and fitting face of basin/lavatory that comes into contact with the countertop to ensure both are free of dust, dirt and grease.
6. Apply a layer of acetic cured silicone sealant/caulking around the sealing rim and fitting face of the basin/lavatory.  
**Important:** do not use epoxy sealants.
7. Bed the basin/lavatory on the countertop.
8. Connect waste/drain assembly to the trap and plumb taps/faucets.
9. Clean excess silicone sealant off around basin/lavatory.

**Cutout template dimensions - 474 x 340mm  
TO USE THIS CUTOUT  
TEMPLATE FOR BENCHTOPS,  
PRINT 1:1 ON A LARGE FORMAT  
PRINTER.**

**Corner Radius: 30mm**

Ø20mm  
Hole

Basin Sealing  
Rim

Ø20mm  
Hole

Ø20mm Hole

Front

999879CIL