



PLUMBERS INSTALLATION INSTRUCTIONS TORRES URINAL


PLUMBERS INSTALLATION INSTRUCTIONS **TORRES URINAL**

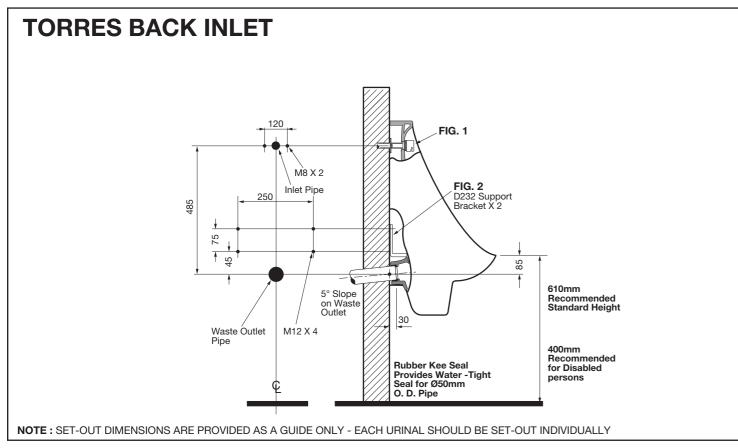


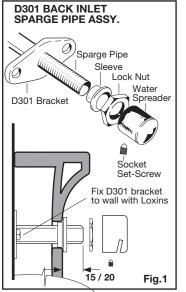

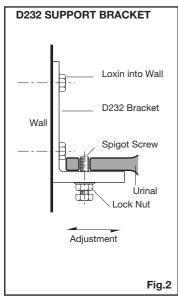

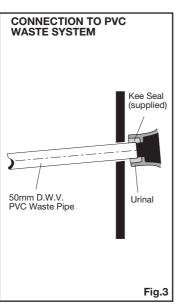


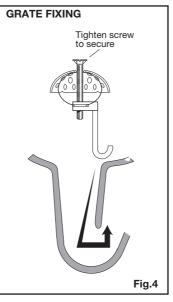


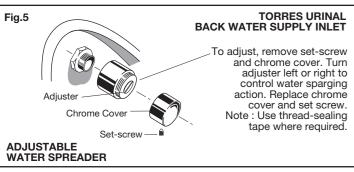



INSTALLATION PROCEDURE


- 1 Mark set-out dimensions as shown above.
- Position sparge pipe using D301 bracket and fix to the wall (Fig.1). - Position D232 support brackets and secure to the wall.
- 4 Push urinal onto D232 brackets and waste pipe to make the
- connection.
- Secure spreader assembly. (Fig. 1) Adjust spigots on D232 support brackets to locate into the urinal (Fig. 2) and fix lock nuts.
- Locate grate into trap. (Fig. 4).
- 8 To adjust grate length wind nut down and screw hook in place on
- 9 Adjust water spreader if necessary as in Fig. 5

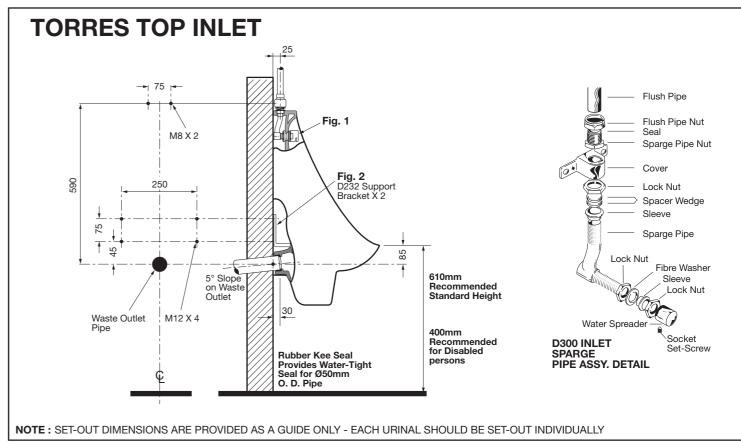


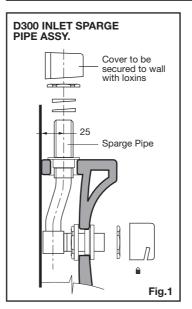

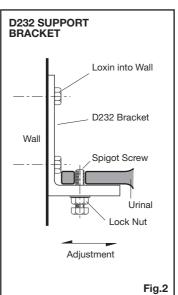

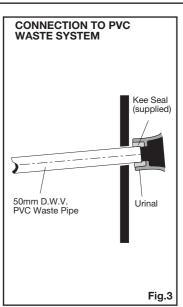

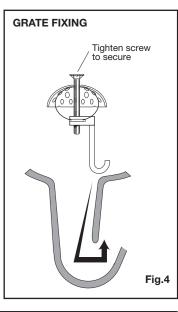

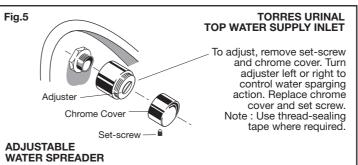

INSTALLATION PROCEDURE

- 1 Mark set-out dimensions as shown above.
- 2 Position sparge pipe using D301 bracket and fix to the wall (Fig.1). 3 Position D232 support brackets and secure to the wall.
- 4 Push urinal onto D232 brackets and waste pipe to make the connection.
- 5 Secure spreader assembly. (Fig. 1)
 6 Adjust spigots on D232 support brackets to locate into the urinal (Fig. 2) and fix lock nuts.
- Locate grate into trap. (Fig. 4).
- 8 To adjust grate length wind nut down and screw hook in place on
- 9 Adjust water spreader if necessary as in Fig. 5