


### PLUMBERS INSTALLATION INSTRUCTIONS

#### Important Information

- \* Not suitable for gravity feed systems.
- \* The showerhead is fitted with a flow regulator. This lower flow rate may not be suitable for connection to some gravity fed Water Heaters, low pressure supply networks, Instantaneous Water Heaters, Tempering Valves, Solar Water Heaters & Thermostatic Mixing Valves. Check with the manufacturers of these products.
- \* Threaded nipple (1) must be square to Wall/Tile face to ensure correct installation.
- \* All pipework must be thoroughly flushed prior to installation, as foreign materials may block the flow regulating device and reduce the flow of water.

#### Installation

- 1) Check that threaded nipple (1) is the correct length, as shown. Cut to length if required ensuring end face is square. Apply thread tape to the thread. **Important** : Care must be taken that thread tape cannot become dislodged and block the flow regulating device, causing a reduction in water flow.
- 2) Screw wall base (2) of shower arm (3) onto threaded nipple (1) & position so that the arm (3) is vertically up. DO NOT OVERTIGHTEN.
- 3) Ensure flow regulator (5) and rubber washer (4) are in position in shower head (6). Carefully screw shower head (6) onto thread of shower arm (3) using a 22mm A/F spanner & tighten, taking care not to damage the decorative finish.

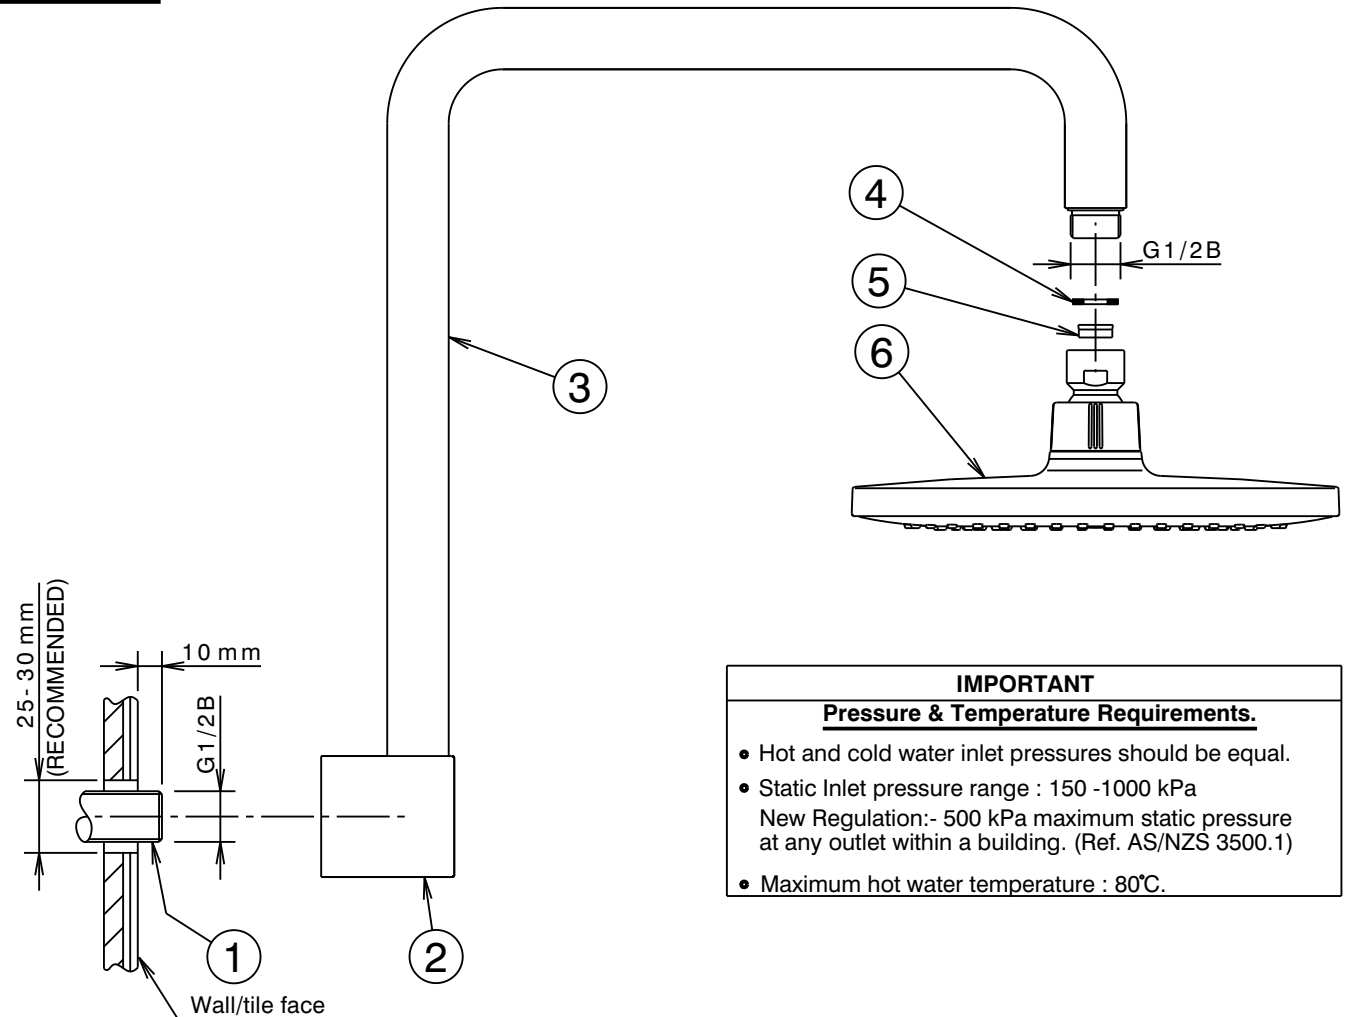

<b>IMPORTANT</b>
<b><u>Pressure &amp; Temperature Requirements.</u></b>
<ul style="list-style-type: none"> <li>• Hot and cold water inlet pressures should be equal.</li> <li>• Static Inlet pressure range : 150 -1000 kPa New Regulation:- 500 kPa maximum static pressure at any outlet within a building. (Ref. AS/NZS 3500.1)</li> <li>• Maximum hot water temperature : 80°C.</li> </ul>